#### 7. Common Faults and Solutions

78 Common Fautts and Solutions		
Failure	Possible Cause	Solution
After installation, only shows 1-way	1, superimposed input and output termination anti	1, confirm the signal input and output connections are
video signal	2, the power did not pick a	correct
	good	2, a re-examination before
	3, the video signal source	the back-end equipment,
	in question	power connections, if
		necessary, replace the
0 1 1		power supply
Overlay control	Superposition of input	1, confirm the signal input
signal, only display	and output termination	and output terminal is
video signals, don't	wrong? Or Control signals	connected correctly
control	not connected to the "2"	2, check the input and
	2, the signal input and	output side of the connector
\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	output ports being	to ensure proper connection
100	exposed?	3, re-set the PTZ control
	3, the control signal is set correct?	parameters
After installation,	1, the transmission	1, confirm transmission
no video signal	distance is too long	cable distance did not
output	2,Cable is open circuit (or	exceed limits
,	short)?	2, check the coaxial cable
7.	3, equipment damage	3, replacement of
	20	equipment

# 2In1 Signal Superimpose device





## 1. Product Overview

This product is targeted to increase video surveillance system monitoring points, engineering, reconstruction and construction of new projects difficult to develop a new product. The use of frequency multiplexing and signal stacking technique, To a video signal into a frequency modulated signal and then overlay to the other video (or control, or audio) signal in, Simultaneous transmission through coaxial cable. To use the original video coaxial cable to achieve surveillance video image point of expansion. To save the construction wire and reducing construction difficulty, It is the product of choice for transformation of the old works.


## 2. Features

- ◆ Superimposed signals option flexible, convenient: According to project the actual situation, One coaxial cable can transmit 2-way video signals Or one way video and one way RS485 control signals or one video and one audio signals
  - ◆ Supports all communication protocols of the transmission
- ◆ . Use of advanced technology solutions and performance of integrated chips, To ensure that equipment can be a long period of stable jobs.
- . Using pluggable design, loading and unloading easy, plug and play, support hot swap.
- Full aluminum alloy metal shell, beautiful and generous, shielding its high heat resistance.
  - Simple construction, easy installation, to avoid debugging.

# 3. Specifications:


- ◆ Nominal input and output level: 1Vp-p
- lacklosh Nominal input and output impedance:  $75\Omega$
- ◆、RF Output Level: 108db
- ◆ Voltage: DC 12V±5%
- ◆ Working Power: Transmitter: 2W Receiver: 2W
- ♦ . Temperature:  $-40^{\circ}$ C ~ +  $50^{\circ}$ C
- ♦ Size (mm): 114(W)\*71(D)\*26(H)

## 4. Transmitter Schematic:

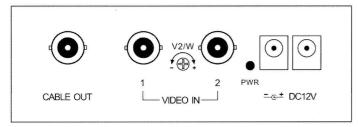


- ◆、CABLE OUT: With the coaxial cable connected to the signal output BNC interface
  - ◆ DC12V: Operating voltage input interface
- ◆、VIDEQ IN 1: video signal input BNC interface (or control signal output interface, or audio interface)
  - ◆、VIDEO IN 2: video signal input BNC interface
  - ◆、PWR: Work lights
  - ◆ 、V2/W: Video input amplitude adjustment.

#### 5. Receiver Schematic:

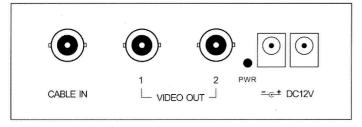

- ◆、CABLE IN: With the coaxial cable connected to the signal input BNC interface
  - ◆ DC12V: Operating voltage input interface
- ◆ 、VIDEO OUT 1: video signal output BNC interface (or control signal input interface, or audio interface)
  - ◆、VIDEO OUT 2: video signal output BNC interface
  - ◆、PWR: Work lights

6. Devices to connect steps and diagram:

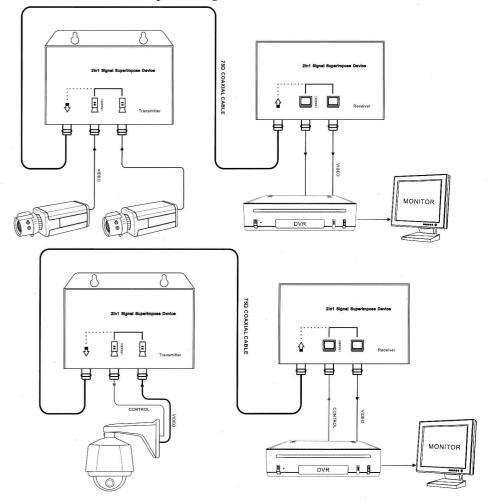

- ◆ Superimposed the signal is connected in series in the video coaxial cable transmission line into, Signal input terminal and the camera (or decoder), and so connect, Signal output terminal connected with the VCR or other devices.
- Superposition of the signal input and output side of the two signals must correspond to Overlay control (or other) signal when the device must be connected to the superposition of the "2" input and output port.
- Properly adjust the side of the video signal input range adjustment knob, So "1" video image satisfaction.